


METERED TEMPORARY ELECTRIC SERVICE - UNDERGROUND FEED

Equipment shown is only an example. Meter base, service panel & outlet installation may be a single unit. Contact the authority with jurisdiction regarding questions on acceptable equipment.


LOCATES REQUIRED
Call Before You Dig
 Call 811 or go to callbeforeyoudig.org

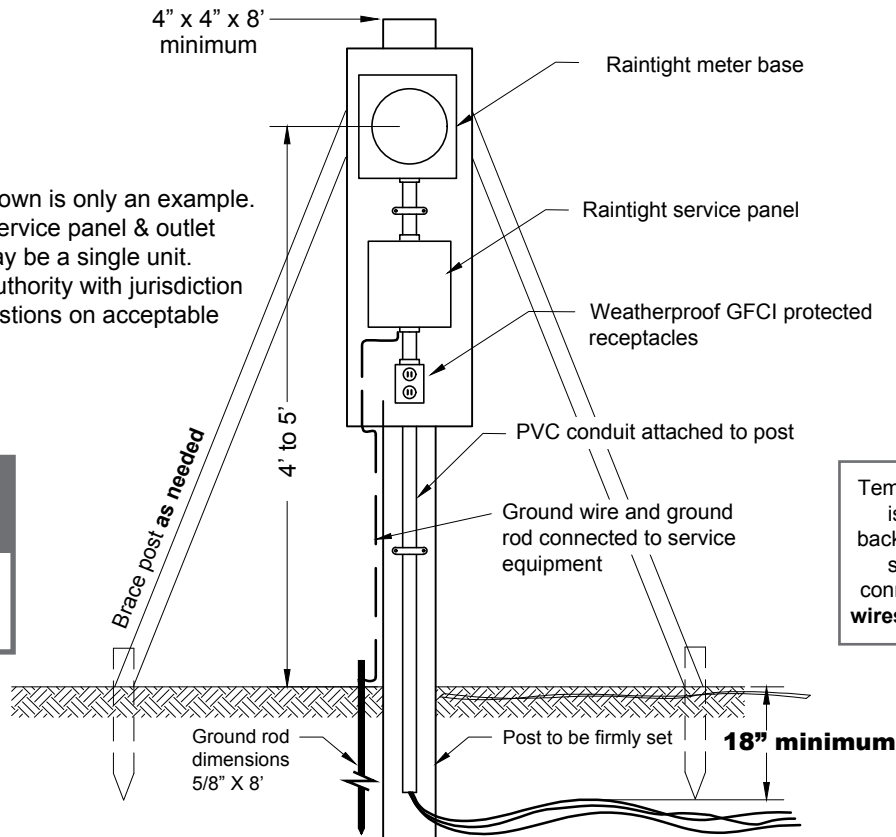

Temp service customer is responsible for backfill/shading of temp service wire after connection. **Energized wires must be covered.**

*If the job site has both a secondary pedestal and a transformer, set the metered temp in the indicated 'Temporary Service Install Location(s)' by the Secondary Pedestal.

Per NEC, direct bury triplex service wire (with warning ribbon as required). Extend conductor to energized pedestal/transformer location with 7' extra for CPU connection.

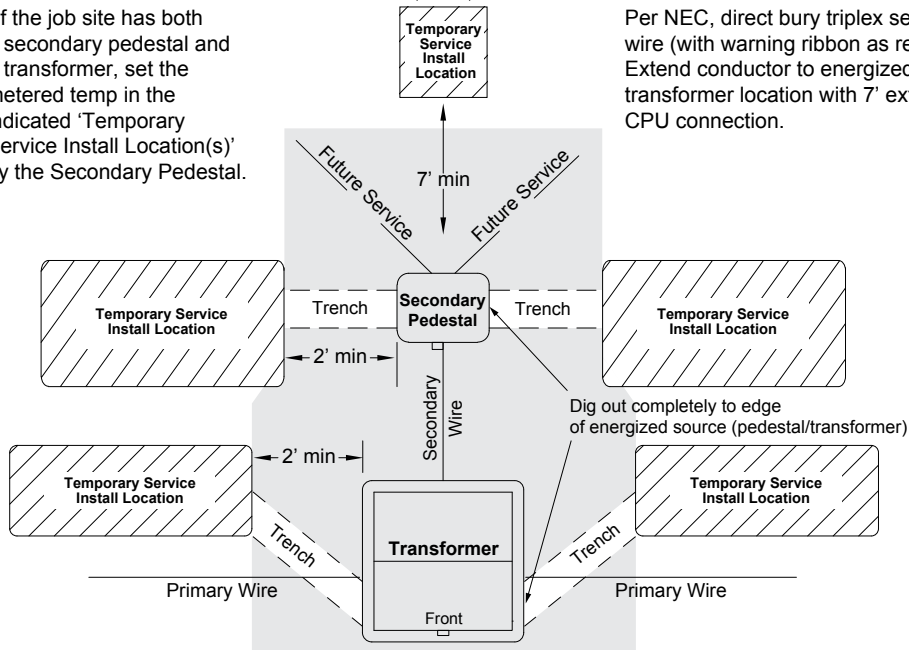

DO NOT INSTALL TEMPORARY SERVICE EQUIPMENT IN GREY AREA

Temporary electric service equipment and installation must meet NEC requirements and pass inspection by the authority having jurisdiction before Clark Public Utilities can set a meter and energize the service.

NOTE: If source equipment is **not** energized, temporary service wire must be landed and tagged in the source facility by the contractor setting the temporary service equipment.